



Installation Instructions & Users Manual

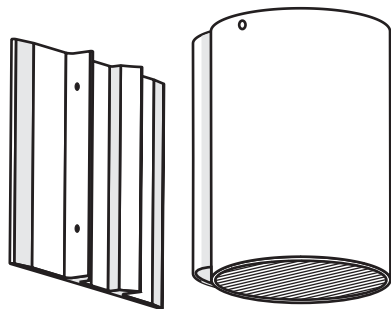

ITEM	QTY	P/N	DESCRIPTION
1	1	344002	HOUSING ASSBY WITH LENS
2	1	344019	POWER SUPPLY LAMP ASSBY- 2 LAMP
3	1	344020	POWER SUPPLY LAMP ASSBY- 3 LAMP
4	1	344005	MOUNT PLATE
5	1	518100	ADAPTOR PLATE 3 1/2"
6	1	595100	LENS

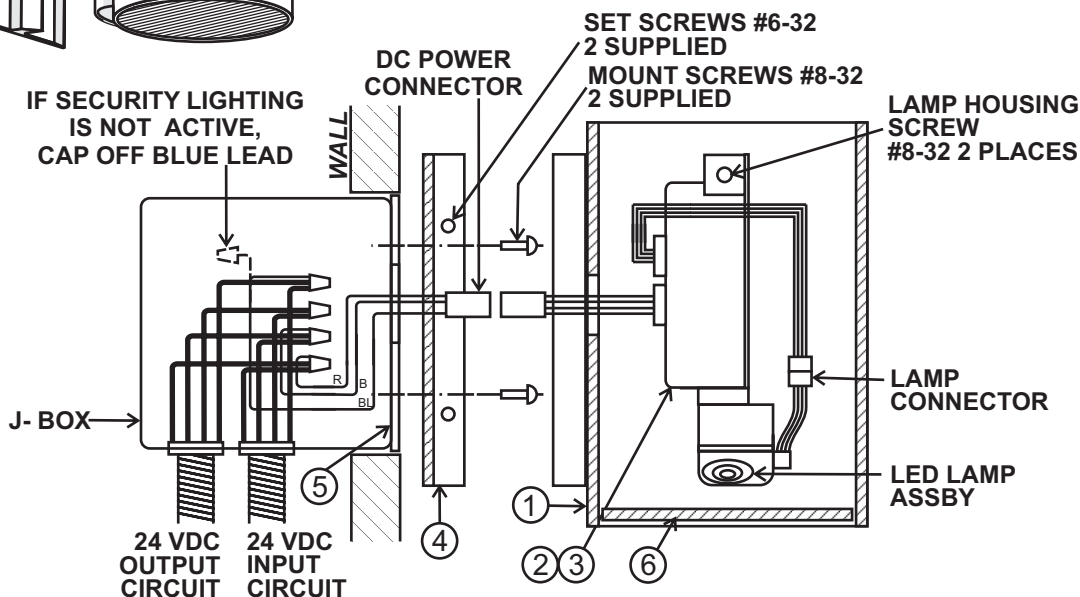

KEY

- B- BLACK: COMMON: 12/24 VDC NEG -
- Y- YELLOW: EXITS: 12-24 VDC POS +
- R- RED: EMERGENCY: 24VDC POS +
- BL- BLUE: SECURITY/ NIGHT LIGHTING: 24 VDC POS +

WALL MOUNT


Fixture is supplied with housing attached to mount plate. To separate, loosen two #6-32 set screws to release cam lock, and detach housing assembly.

1. Install j-box with DC wiring. Disconnect DC pigtail supplied on fixture, connect to DC inputs with standard wire nuts. MAINTAIN COLOR CODING.
2. Route DC connector pigtail plug through 4" j-box adaptor plate supplied, and secure plate to j-box with two #8-32 screws.
3. Secure Mount Plate to adaptor plate and route pigtail plug through center hole.
4. Connect plug on pigtail to matching plug on fixture, and push connector through access hole into j-box. (NOTE: If AC line power to central battery is OFF, lamps will turn ON in emergency mode).
5. Locate the fixture assembly on the mount plate and tighten #6-32 set screws to lock fixture in place.

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Disconnect AC power before servicing.
2. Refer to wiring diagram for proper connections.
3. All servicing should be performed by qualified personnel.
4. Consult your local building code for approved wiring and installation.
5. Do not use outdoors.
6. Do not use this equipment for other than intended use.
7. Do not let power cords touch hot surfaces.
8. Mount and secure the fixture at a location and height to avoid ready access and tampering by unauthorized persons.
9. The use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition.

SAVE THESE INSTRUCTIONS

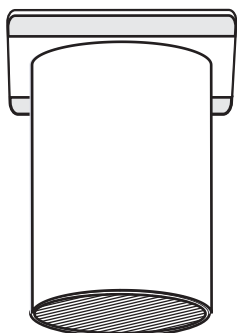

ITEM	QTY	P/N	DESCRIPTION
1	1	344004	HOUSING ASSBY WITH LENS
2	1	344019	POWER SUPPLY LAMP ASSBY- 2 LAMP
3	1	344020	POWER SUPPLY LAMP ASSBY- 3 LAMP
4	1	344006	MOUNT PLATE
5	1	138100	ADAPTOR PLATE 3 1/2"
6	1	595100	LENS

TOP MOUNT TO CANOPY OR DIRECT TO OUTLET BOX

Fixture is supplied with housing attached to mount plate. To separate, loosen two #8-32 flat head screws at top of housing, and slide power supply assembly out of housing.

1. Follow steps 1-4 for WALL MOUNT.
2. NOTE: For mount direct to a j-box, the Mount (Canopy) Plate is not supplied, and the j-box adaptor plate is fitted with a bracket to attach to housing directly.
3. Slide the housing over the power supply assembly, and route the DC input wiring inside the housing.

NOTE: LAMP ASSEMBLY SHOULD BE CORRECTLY ORIENTED WITH RESPECT TO PATH OF EGRESS. SEE FIG. 1. ALIGNMENT MARKS ON LENS SHOULD BE IN LINE WITH PATH.

4. Line up and secure the two #8-32 flat-head lamp housing screws.



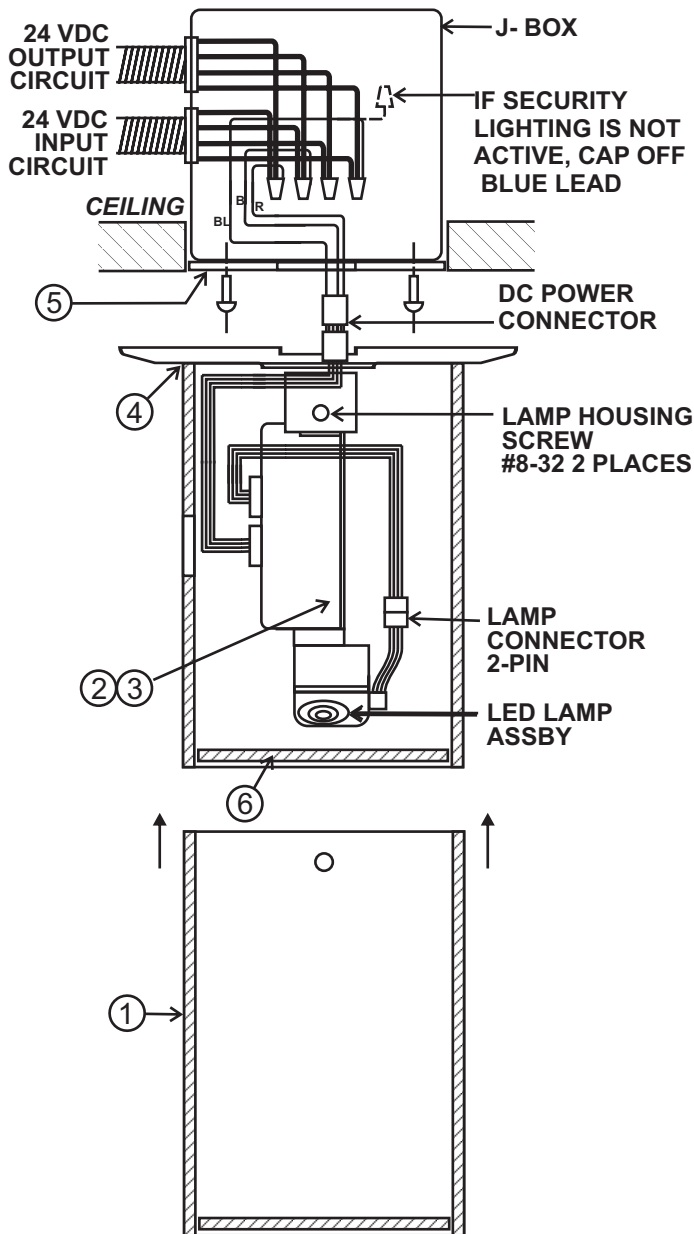


Fig. 1

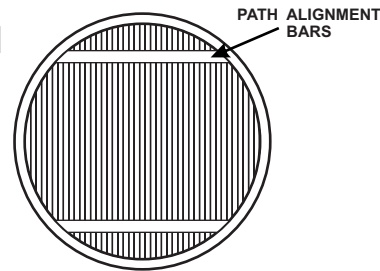

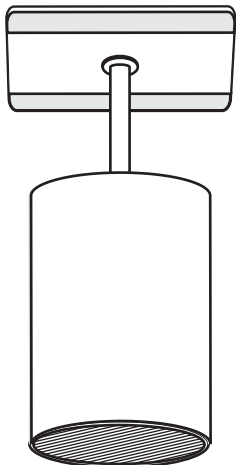

ITEM	QTY	P/N	DESCRIPTION
1	1	344004	HOUSING ASSBY WITH LENS
2	1	344019	POWER SUPPLY LAMP ASSBY- 2 LAMP
3	1	344020	POWER SUPPLY LAMP ASSBY- 3 LAMP
4	1	344006	MOUNT PLATE
5	1	518100	ADAPTOR PLATE 3 1/2"
6	1	595100	LENS

PENDANT MOUNT

1. Install J- Box with DC wiring.
2. Secure adaptor plate to J- Box with wires through access hole.
3. Connect wires from MLS pendant assembly to wires from J- Box with standard wire nuts. Maintain color coding.
4. Push wires & wire nuts through access hole into J- Box.
5. Secure mount plate to J- Box with (2) #8-32 screws

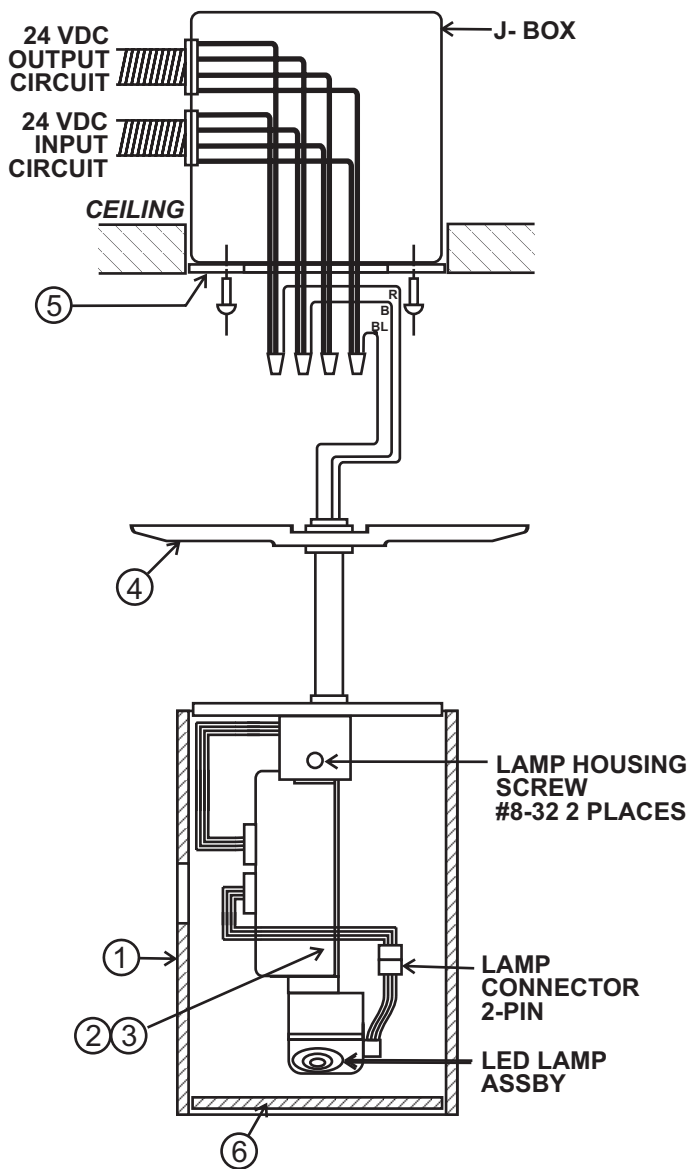


Fig. 1

