


Installation Instructions & Users Manual Addendum

Surface Mount with J- Box Trim

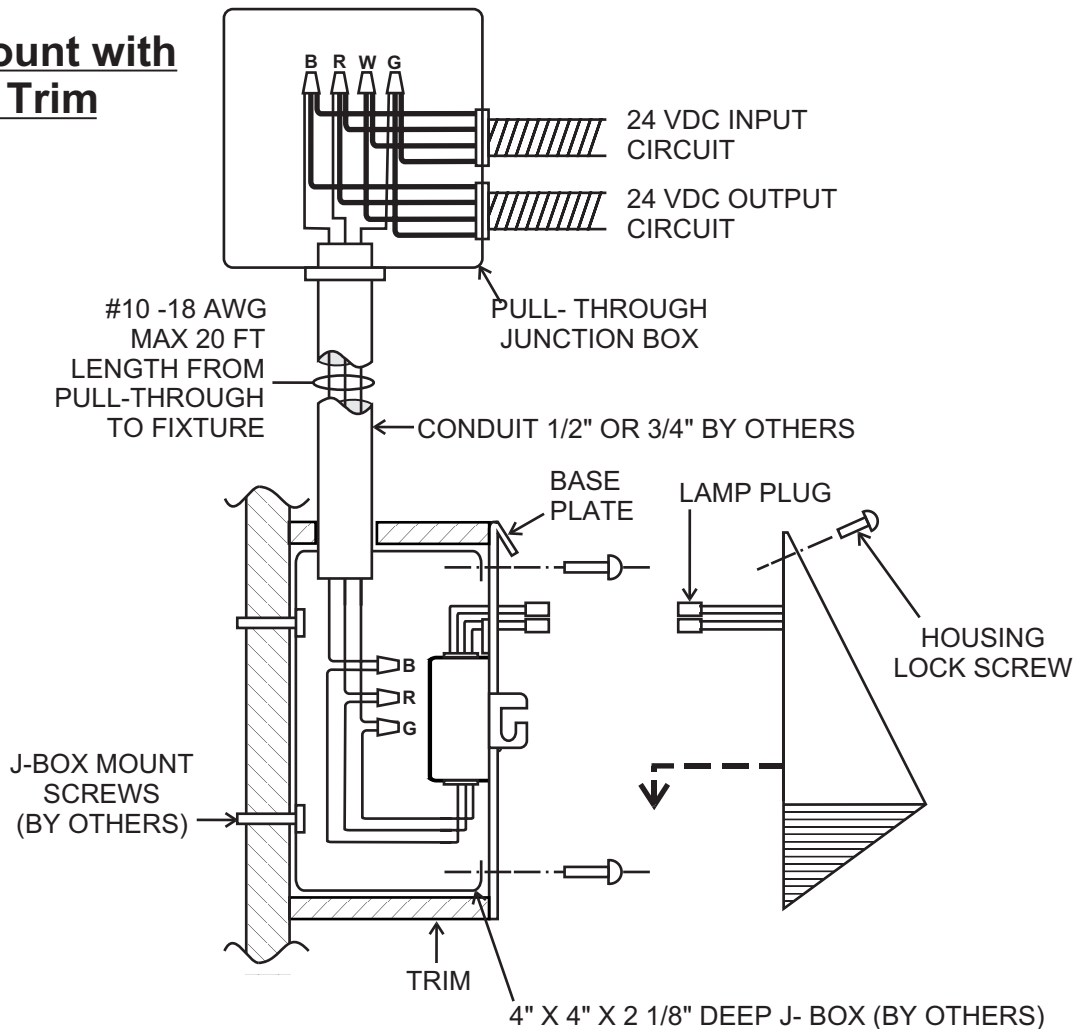

1. Install pull-through j-box as shown above or near fixture location, and run 24V branch circuits IN/Out as required. Connect minimum #18 AWG fixture loop conductors to BLACK, RED and GREEN wiring as shown.
2. Remove center position KO from standard 4" x 4" x 2 1/8" Deep J-Box as required to fit conduit and mount J-Box to wall securely, using screw anchors.
3. Install conduit and route fixture loop wiring into fixture j-box.
4. Place Trim over j-box. Connect BLACK, GREEN and RED wiring from base plate assembly power supply to fixture loop wiring, using standard wire nuts.
5. Place base plate assembly over j-box with housing lock screw tab on top and secure to j-box with (2) #8-32 screws.