


# INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL


## Fig. 1

### HORIZONTAL MOUNT SINGLE FACE

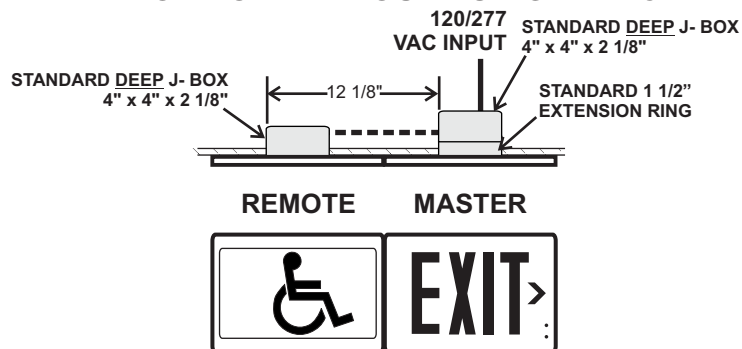


----- CLASS 2 LOW VOLTAGE WIRING 18-22 AWG

### VERTICAL MOUNT SINGLE FACE

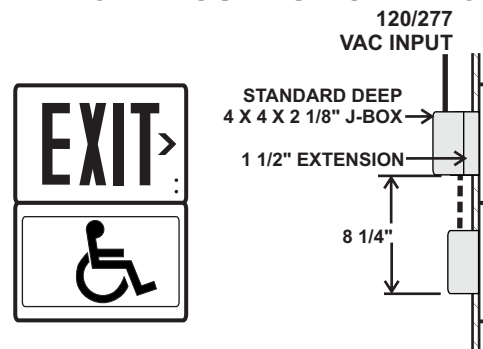


### DOUBLE FACE

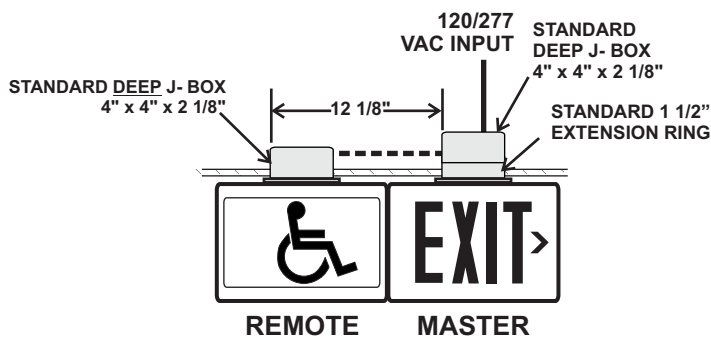

----- CLASS 2 LOW VOLTAGE WIRING 18-22 AWG

## Fig. 2

### MASTER SIGN POWER SUPPLY ASSEMBLY

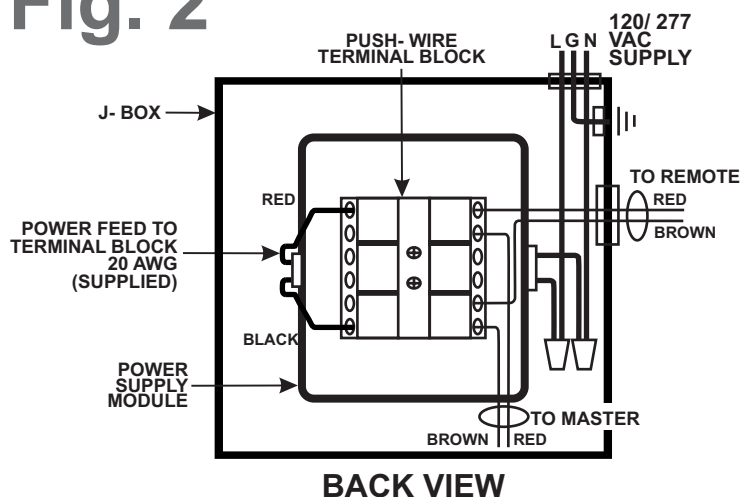

### J-BOX INSTALLATION


1. See Fig 1: Install a 4" x 4" x 2 1/8" J-box with 1 1/2" extension for Master sign and Remote signs. Position J-boxes approx 1/4" below finished panel surface and set in line, 12 1/8" apart for horizontal mount, and 8 1/4" apart for vertical mount. NOTE- Location of J- boxes must be accurate to position the two signs correctly.
2. See Fig 2: Attach low voltage output wiring to Terminal Block mounted on Master power supply assembly (some fixtures may be shipped with wiring in place). Maintain color codes and polarities as shown.
3. Connect AC input wiring 120/277 VAC to power supply in Master J-box with standard wire nuts and attach Ground wire to J-box.

### IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Disconnect AC power before servicing.
2. Refer to wiring diagram for proper connections.
3. All servicing should be performed by qualified personnel.
4. Consult your local building code for approved wiring and installation.
5. Do not use outdoors.
6. Do not use this equipment for other than intended use.
7. Do not let power cords touch hot surfaces.
8. Mount and secure the fixture at a location and height to avoid ready access and tampering by unauthorized persons.
9. The use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition.

**SAVE THESE INSTRUCTIONS**

**Rapier Accessible Exit Master Remote System  
 Pendant Mount**

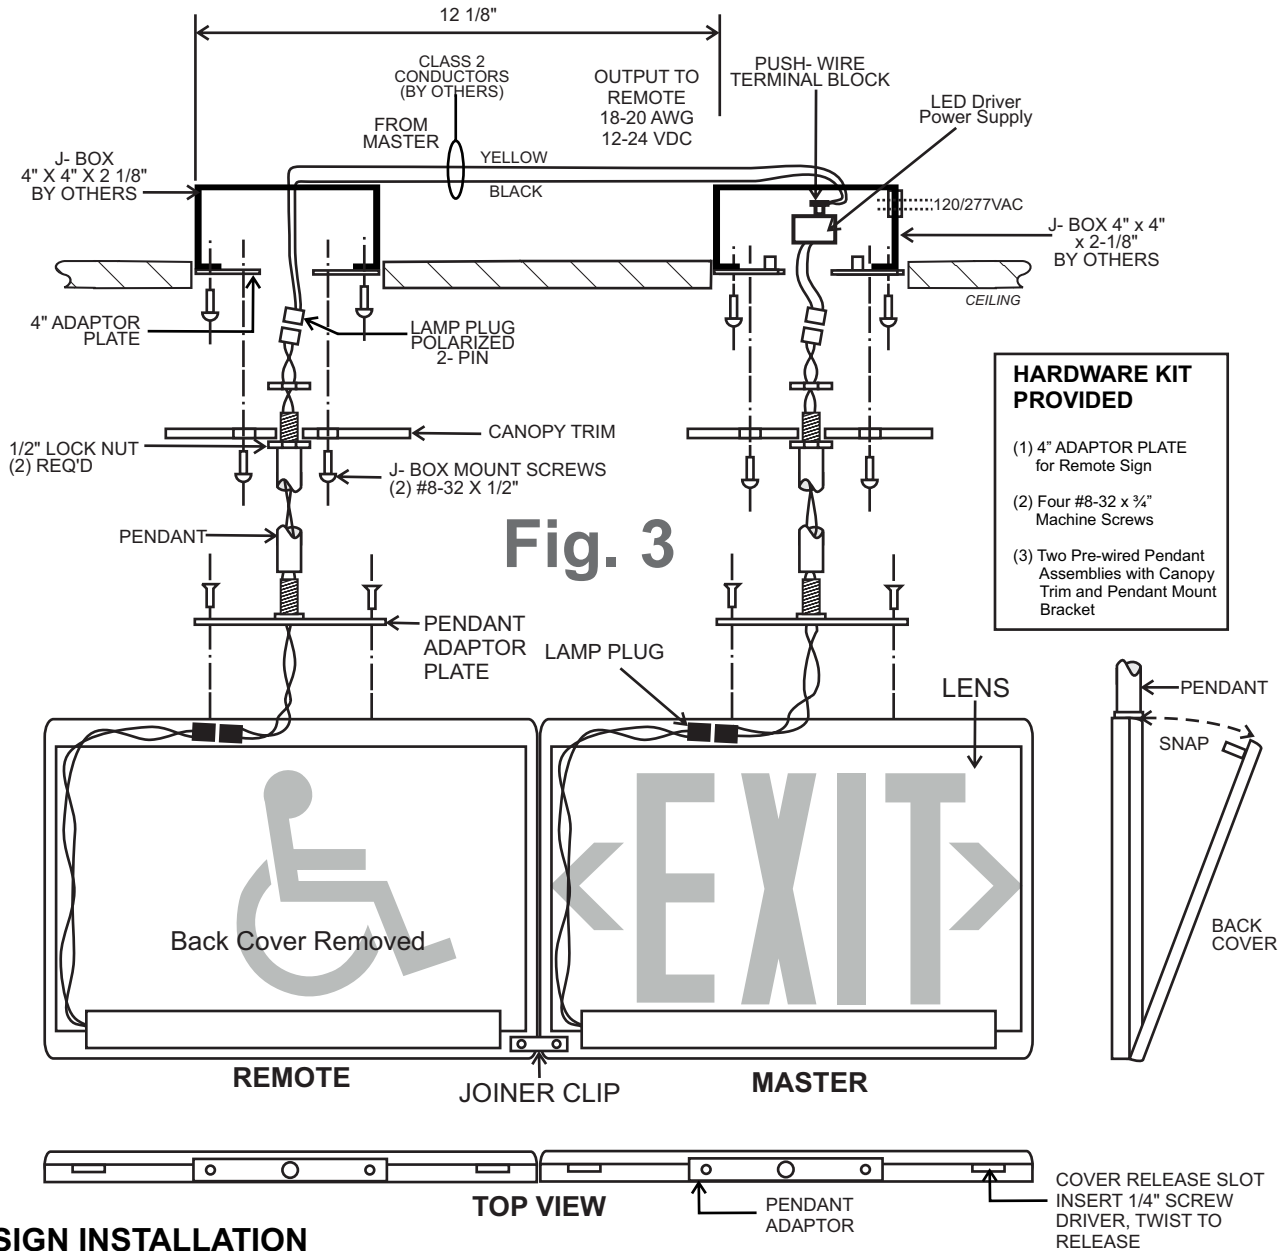

1. See Fig 3: Remove Back Cover from Master and Remote signs and remove two #6-32 x 1/4 Flat Hd screws attaching CLIP at base of signs DO NOT DISCARD SCREWS.
2. Attach Pendant Assembly to Master and Remote signs, connect lamp plug and position plug in location shown.
3. Raise each sign assembly into position, connect lamp plug and push connector with excess wire into J-Box. Attach Canopy Trim to J-Box with (2) #8-32 screws and tighten pendant lock nuts.
4. Attach CLIP at base of sign assembly with (2) flat head screws supplied. As shown, locate the base of each Back Cover on tabs at base of sign, rotate and snap each cover in place.
5. Turn on AC power to check lamp operation on Master and Remote signs.